
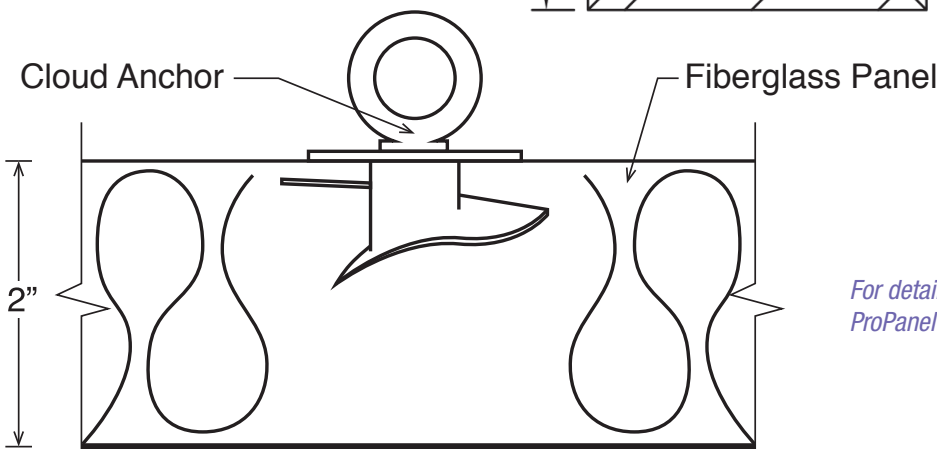
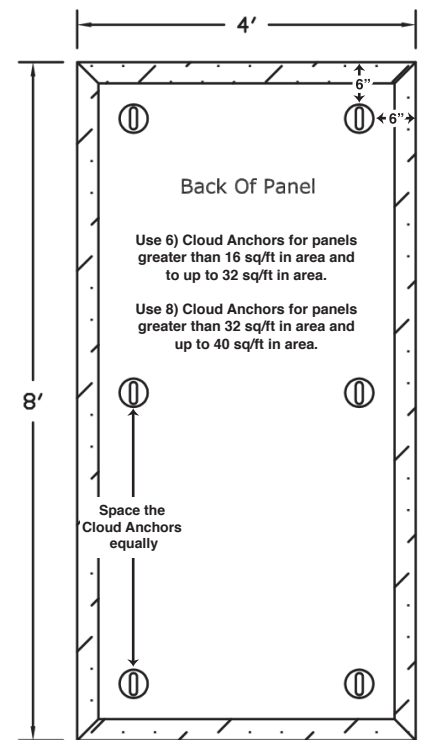
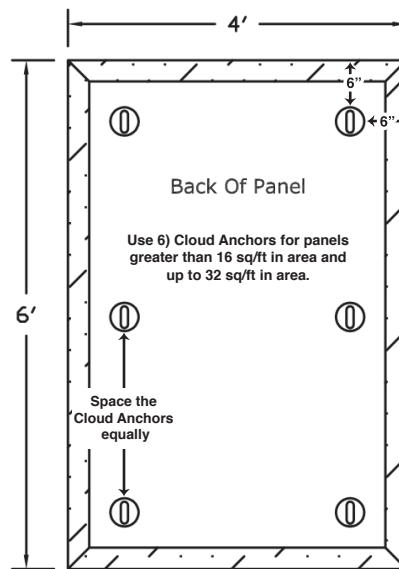


- Place the **ProPanels** on a clean flat surface, back side up.
- Review the table below and illustrations for **Cloud Anchor** placement. Do not install fewer **Cloud Anchors** than suggested. All **Cloud Anchors** should be 6" from the **ProPanel** edge and should only be used on 2" thick **ProPanels**, 40 sq/ft in area or less.

| <u>Panel Area</u> | <u>Number of Cloud Anchors</u> |
|--------------------------------------|--------------------------------|
| 16 square feet | 4 |
| Greater than 16 sq/ft up to 32 sq/ft | 6 |
| Greater than 32 sq/ft up to 40 sq/ft | 8 |

- Measure and mark the location of each **Cloud Anchor** on the rear surface of the panel that has exposed fiberglass (*see guide lines in the illustrations below*).
- Press the **Cloud Anchor** firmly into the marked location and twist clockwise until the top disc of the anchor is flat to the back of the panel. Do not turn the **Cloud Anchor** so the washer goes into the fiberglass, or you will risk pushing it through the panel.
- Attach panel to preferred ceiling hardware (*user supplied*) using **Cloud Anchor** eye-hook.

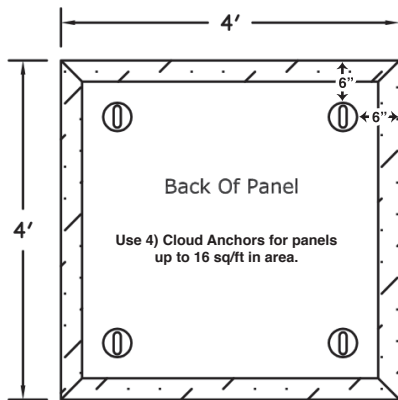

For detail on handling Auralex ProPanels, refer to the ProPanel Installation Guide included with your ProPanels.